

NovaSnap™ Mop Head



The NovaSnap™ low-touch flat mop head with a smooth knit polyester cleaning surface uses a simple snap-on and release clip action for improved cleanliness and ergonomics. Use with Micronova's SlimLine plastic adapter, 360° swivel mop adapter cleaning system.

The multi surface mop is well suited for equipment and glass walls as well on room surfaces. The mop evenly coats surfaces with disinfectants when needed but is equally appropriate for damp mopping.

- Absorbent and efficient – for all controlled environments
- Simple two-three step attachment – align, push and clip
- Lightweight and easy to maneuver
- Smooth polyester cleaning surface with urethane foam interior
- Durable polystyrene clips
- Slim 14" design – optimum wetting/economical use of disinfectant
- Excellent size to work equally well on floor, walls and windows
- Ergonomic unit – less than 2lbs (0.8 kilos) – handle, adapter and NovaSnap mop
- Use with SlimLine plastic adapter with 360° swivel handle attachment
- Recyclable


Manufactured for use in Controlled Environments

- ISO 5 thru 9 Cleanrooms
- ISO 9001 Certified Manufacturing Facility
- Autoclavable
- Good chemical resistance to disinfectants



①
Align plate
under clips

②
Push and snap
mop adapter
in place

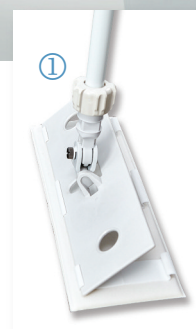

SPECIFICATIONS

Materials of Construction:

Interior:	Urethane Foam
Surface:	NovaPoly™ 100% smooth polyester knit
Clips:	Polystyrene

Dimensions:

Width:	5.25", 13.34cm
Length:	14.75", 37.47cm

Weight or Capacity:

Each mop head weighs less than 100 grams wet.

Catalog No. 19142-680 NovaSnap, Polyester

Catalog No. 19142-681 NovaSnap, Polyester, Gamma Irradiated

Distributed by Fisher Scientific. Contact us today:

In the United States

Order online: fishersci.com

Call customer service: 1-800-766-7000

In Canada

Order online: fishersci.ca

Call customer service: 1-800-234-7437

