

Econo CurtainCleaner™


Clean Vinyl Strip Curtains Easily & Efficiently



The Micronova **Econo CurtainCleaner™** features a simple design that allows the operator to clean vinyl strip curtains, both sides at the same time, in cleanrooms and support areas. The Econo CurtainCleaner grips the curtain at its uppermost connection and slides down to apply or squeegee the cleaning agent on both sides of the curtain.



- Covers are available in three fabrics: NovaPoly™, PolySorb™, and Microfiber with a urethane foam interior
- Replaceable Cleaning Covers may be laundered and reused
- Irradiated Covers Available
- Autoclavable Covers and Adapter
- Covers and Adapter holds up to strong disinfectants and cleaning solutions

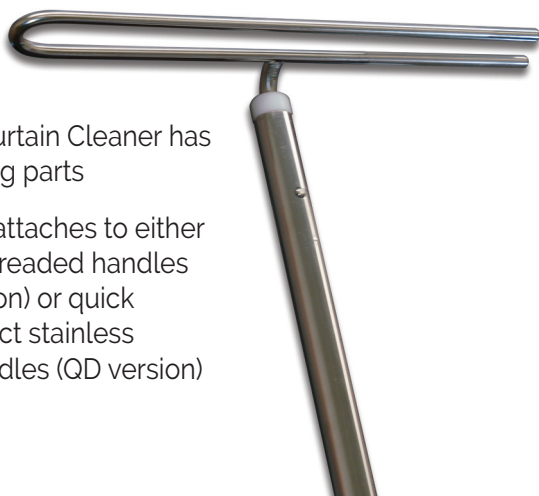

- Econo Curtain Cleaner has no moving parts
- Adapter attaches to either plastic threaded handles (QP version) or quick disconnect stainless steel handles (QD version)

ECC6-14	NovaPoly ECC cover, 14"
ECC6-14IR	NovaPoly ECC cover, Irradiated, 14"
ECC11-14	PolySorb ECC cover, 14"
ECC11-14IR	PolySorb ECC cover, Irradiated, 14"
ECCAA-14	Microfiber ECC cover, 14"
QDECC-14	Econo CurtainCleaner Quick Disconnect, Adapter, 14"
QPECC-14	Econo CurtainCleaner Threaded End, Adapter, 14"

Specifications:

Materials of Construction:

Adapter: Stainless Steel and Acetal

Covers:

NovaPoly™ : 100% smooth knit polyester over urethane foam

PolySorb™: 100% textured polyester over urethane foam

Microfiber: 80% polyester, 20% nylon over urethane foam

Dimensions: Adapter: 14 x 1/2 x 6"

Covers: 14 x 2-1/2 x 6"

Weight: Less than one pound (Adapter only)

Manufactured for use in Controlled Environments

- ISO 5 thru 9 Cleanrooms
- ISO Certified Manufacturing Facility
- Good chemical resistance to disinfectants



Micronova Manufacturing, Inc.
3431 W. Lomita Boulevard
Torrance, CA 90505-5010 USA

Tel: 310/784-6990
Fax: 310/784-6980

SalesInfo@micronova-mfg.com
www.micronova-mfg.com